


NOTICE DE MONTAGE


SABOT MOTEUR ERMAX ADAPTABLE SUR TDM 900 2002/2009




Patte arrière droite

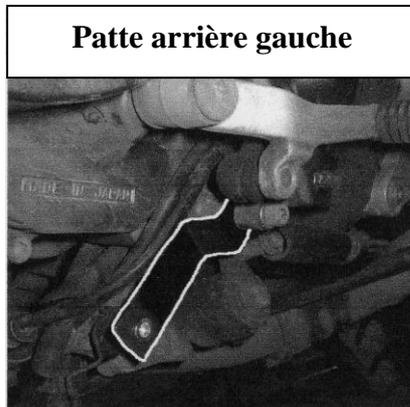

Patte arrière gauche

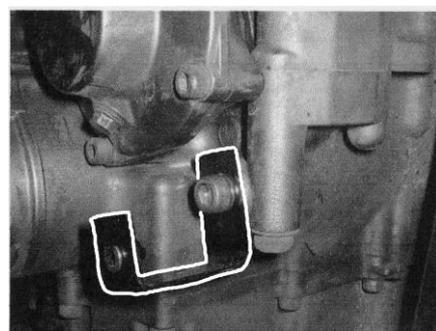

Patte avant droite

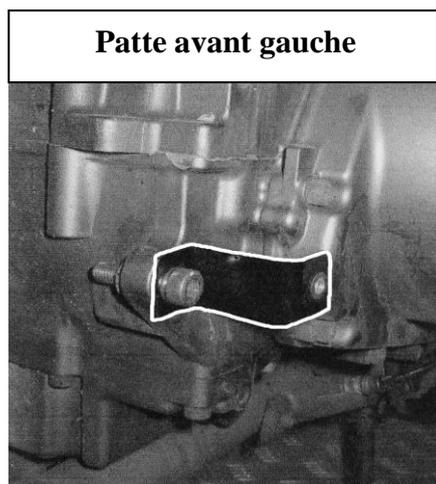

Patte avant gauche

Kit de fixation

- 4 pattes de fixation
- 7 vis BHC 5×15
- 7 rondelles plastique Ø5
- 2 vis CHC 8×40
- 3 rondelles acier Ø5
- 3 écrous M5
- 2 écrous M8

Montage

- Montez les 4 pattes de fixation sur la moto comme indiqué sur les photos (sans bloquer le serrage).
- Assemblez les 2 parties du sabot à l'aide des 3 vis BHC 5×15, des 3 rondelles plastique, des 3 rondelles acier et des 3 écrous M5 fournis.
- Positionnez le sabot. Fixez-le sur les pattes de fixation avec les 4 vis BHC 5×15 et les 4 rondelles plastique restantes. Centrez le sabot et vérifiez qu'il ne soit pas en contact ni avec les carters ni avec le pot d'échappement.
- Bloquez le serrage des pattes de fixation ainsi que celui du sabot en faisant attention à ne pas le détériorer avec un serrage excessif.

« ATTENTION »

* Les pièces peintes et vernies ne sont pas garanties contre les lavages vapeur « haute pression » ou les produits nettoyants agressifs qui peuvent les endommager et décoller le vernis. Nous conseillons d'ailleurs, d'après les données techniques de nos fournisseurs en peinture, d'**attendre un mois** afin d'obtenir une polymérisation complète du vernis.

* Tout accessoire monté ne sera plus considéré comme neuf et ne sera **ni repris ni échangé**.

* Les accessoires Ermax sont conçus pour des **montes d'origine**. Ils ne seront pas garantis s'ils sont utilisés dans d'autres conditions.

* En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermax peuvent nécessiter des ajustements lors de la fixation.

* Les sabots ne seront ni repris ni échangés en cas de frottement lors d'une conduite "sportive", ou lors du franchissement de trottoirs, dos d'âne ... Le montage des accessoires Ermax est prévu pour une **utilisation routière normale**.

* Déplacer toute durite pouvant couler à l'intérieur des sabots. Toute casse due à des **écoulements de produits corrosifs** n'est pas garantie.

* Attention aux serrages excessifs qui pourraient abîmer ou casser nos accessoires en plastique et les vis en aluminium.


* Les marques de fabricant de motos citées sont indiquées exclusivement comme référence nécessaire à la destination des accessoires Ermax.

FITTING INSTRUCTIONS


*ERMAX BELLY PAN
ADAPTABLE ON TDM 900 2002/2009*




Rear right bracket

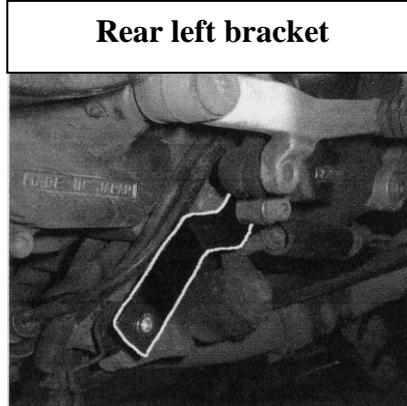

Rear left bracket

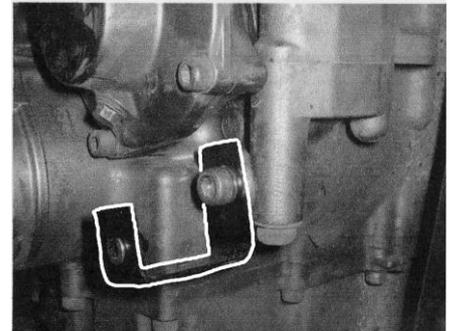

Front right bracket

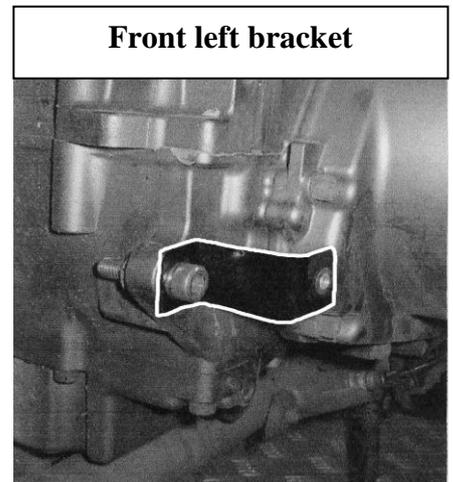

Front left bracket

Fitting kit

- 4 fixing brackets
- 7 5×15 BHC screws
- 7 Ø5 rubber washers
- 2 8×40 CHC screws
- 3 Ø5 steel washers
- 3 M5 nuts
- 2 M8 nuts

Assembly

- Fix the four fixing brackets on the bike as indicated on the photos (without blocking tightening).
- Assemble the two parts of the belly pan using the 3 BHC 5×15 screws, 3 rubber washers, 3 steel washers and 3 M5 nuts provided.
- Position the belly pan. Fix it on the brackets using the four BHC 5×15 screws and the last 4 rubber washers. Centre the belly pan and check that it is clear of both the engine casing and the exhaust pipe.
- Block the bracket tightening and that of the belly pan, paying attention not to damage it with excessive tightening.

< CAUTION >

* Painted and varnished parts are not guaranteed against high pressure steam washes or aggressive cleaning products which can damage them and unstuck the varnish. We advise moreover, according to the technical data of our painting suppliers, to wait one month to obtain a complete polymerization of varnish.

* Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.

* Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.

* Due to vehicles made tolerances, beyond our control, some Ermax products might need adjustments to fit.

* Belly pans will be neither retaken nor exchanged in case of rubbing during a "sports" driving, or during the clearing of pavements, uneven road surfaces ... The fitting of Ermax accessories is planned for a **normal road use**.

* Move hoses so that they do not fall inside the belly pans. Any deterioration due to flows of corrosive products is not guaranteed.

* Care to excessive clampings which may damage or break our plastic accessories and aluminium screws.

* The mentioned label of motorbikes's manufacturers are indicated exclusively as a reference to Ermax accessories.